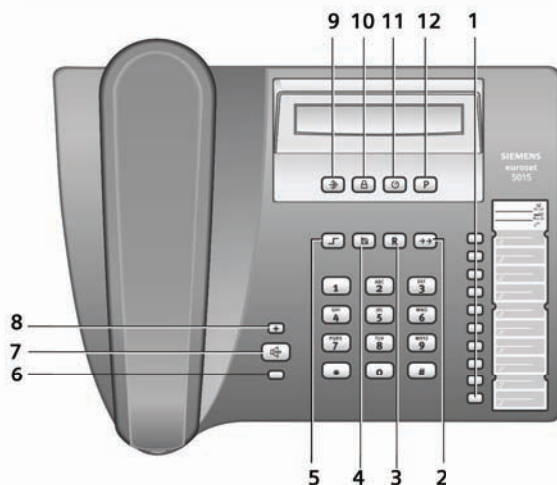 


Euroset 5015 Quick Guide



Keys

- 1 Repertory keys
- 2 Last number redial key
- 3 Recall key
- 4 Mute key
- 5 Shift key
- 6 Quiet key
- 7 Loudspeaker key (handsfree)
- 8 Loud key
- 9 Set key
- 10 Lock key
- 11 Reset key (call duration)
- 12 Pause key

Display symbols

- ⇨ In setting mode
- ⇨ Shift key pressed
- Ready for use
- ☒ Microphone off
- o Entry mark when setting (e.g. volume)
- u Recall key pressed
- P Pause
- ≡ No memory content
- PIN entry
- ≡≡≡ Telephone locked
- 0-9 Phone number

With tone dialling:

- o - * key pressed
- - # key pressed

Safety precautions

When installing, connecting and operating the telephone, always observe the following precautions:



- ◆ Only use the plugs and leads supplied.
- ◆ Only connect the connecting lead to the socket/jack provided for that purpose.
- ◆ Only connect approved accessories.
- ◆ Arrange the connecting lead where it will not cause accidents.
- ◆ Position the telephone on a non-slip surface.
- ◆ For your safety and protection, the telephone must not be used in bath or shower rooms (wet locations). The telephone is not splash proof.
- ◆ Never expose the telephone to sources of heat, direct sunlight or other electrical devices.
- ◆ Protect your telephone from moisture, dust, corrosive liquids and vapours.
- ◆ Never open up the telephone yourself.
- ◆ Do not touch the plug contact with pointed or metallic objects.
- ◆ Do not carry the telephone by the leads.
- ◆ If you give your Euroset 5015 to someone else, make sure you also give them the user guide.

Preparing the telephone for use

Recommended installation of telephone

- ◆ Do not expose the telephone to direct sunlight or other sources of heat.
- ◆ Operate at temperatures between +5°C and +40°C.
- ◆ Maintain a distance of at least one metre between the telephone and radio equipment, e.g. wireless telephones, wireless pagers or TV sets. Otherwise, telephone communication could be impaired.
- ◆ Do not install the telephone in dusty areas as this can shorten the service life of the telephone.
- ◆ To clean, wipe with a moist or antistatic cloth only, never with a dry cloth (risk of electrostatic charging and discharge) or harsh cleaning agent.
- ◆ Furniture lacquer and polish can be damaged by contact with parts of the unit (e.g. device feet).

Connecting

Insert the short end of the coiled handset cord in the socket provided in the handset and the long end in the socket marked with an  on the underside of the device. Plug the phone cord into the outlet on the wall and the other end into the socket marked with a  on the underside of the device. Then your telephone is ready to use.

 


Making calls

Dialling a number




Lift handset, dial number.

Any digits after the 20th digit are moved from right to left in the display. The Pause key  can be used to insert pauses when dialling, starting from the 2nd digit.

Last number redial (one of the last 5 call numbers)

The last 5 different call numbers dialed are automatically saved (max. 32 digits each).



Lift handset (or press the Loudspeaker key ) until the dialling tone is audible).



Press the Redial key repeatedly until the required call number appears with the place number (1...5 on the left).





Enter the place number (1...5).

The relevant call number is redialed.

Dialling using the repertory keys





Lift handset (or press the Loudspeaker key ) until the dialling tone is audible). (If necessary, press  for a 2nd level repertory key).



Press repertory key.

Saving numbers

Different telephone settings must be completed with the Set key  so that they are available permanently.




In order to **cancel** without saving, e. g. after an incorrect entry, replace the handset instead of pressing  at the end. The original setting is then retained.


Saving with notebook function


You can also save phone numbers during a conversation with the notebook function.

Saving repertory numbers

You can save up to 20 phone numbers (or even functions, see page 6) on both levels of the repertory keys.

  Lift handset, press the Set key. (For 2nd memory level, also press .)

 Press the repertory key under which you want to save the repertory number.



A number that has already been saved is shown in the display. If the memory for this repertory key is empty,  appears in the display


Enter the number to be saved (up to 32 digits).




or ...

Saving from the redial list:


 ...  Press the Redial key repeatedly until the desired phone number is displayed on the screen.

 Press the Set key. Replace handset.

Pressing  allows you to save pauses (not at the 1st digit). After the 20th digit, any following digits are moved from right to left in the display.

Delete all repertory numbers

      Lift handset, initiate function.

 Press the Set key. Replace handset.

Adjusting the telephone

Adjusting the ringer volume

The volume of the ringer can be set to one of 7 levels and can also be deactivated completely (default setting: level 7, highest level) or deactivated completely. When the ringer is deactivated an incoming call is notified in the display only.

◆ To adjust when the telephone is idle:

   Lift handset, initiate function.

 ...  Adjust the volume with the Loud/Quiet key.

 Press the Set key. Replace handset.



◆ To adjust while the telephone is ringing:

 

Press  ...  before lifting the handset.

The last value set is saved.


Setting the ringer frequency

The frequency (speed) of the ringer can be set to one of three levels (default setting: level 3).

   Lift handset, initiate function.

 ...  Press one of the keys 1...3:



1: highest frequency; 3: lowest frequency.

 Press the Set key. Replace handset.

Setting the ringtone

Ten different ringtones can be set for the ringer (default setting: ringtone 0).




   Lift handset, initiate function.

 ...  Press one of the keys 0 ... 9


 Press the Set key. Replace handset.

Setting the handset volume

The volume on the handset can be set to one of 3 levels and saved (default setting: level 1).


   Lift handset, initiate function.

 ...  Adjust the volume with the Loud/Quiet key.

 Press the Set key. Replace handset.

Mute

You can deactivate the telephone's handset and microphone. Then the other party can no longer hear you.

 During a call: Press the Mute key
Activate: Press the key again.

Setting the pause time

If necessary, the pause time of the Pause key **[P]** (pause function from second input position) can be changed to 1, 3 or 6 seconds (default setting: 3 seconds).



Lift handset, initiate function.



0: 1 sec.; **1:** 3 sec.; **2:** 6 sec..



Press the Set key. Replace handset.

Changing the dialling mode



Lift handset, initiate function.



1: Tone dialling.

2: Pulse dialling without flash function.



Press the Set key. Replace handset.

Changing dialling modes during a call

If your telephone is set to pulse dialling and you want to use functions that require tone dialling (e.g. remote access to an answering machine), you can change the dialling mode during a call.



With an open connection: press the star key.



Enter digits for remote control/data transfer.

The telephone is reset to the original dialling mode by hanging up the handset.

Operation on a PABX

Enter/delete an external line prefix

If you are using your telephone on a PABX, you may have to save one or more external line prefixes. A dialling pause is set automatically with the external line prefix. You can save up to three external line prefixes.



Lift handset, initiate function.

If no external line prefix has been set in a location, **Ξ** appears in the display.

If several external line prefixes are saved, these are displayed next to one another; the current external line prefix to be edited flashes.

If necessary, use the **[↔]** key to toggle between the external line prefixes displayed, to edit them as follows:

To delete an external line prefix:



Press the Set key. Replace handset.

To enter an external line prefix:



Enter a one- to three-digit code.

Enter additional external line prefixes:



Press the Last number redial key, enter next external line prefix.



Press the Set key. Replace handset.

Recall key (on a PABX)

During an external call, you can make a recall or divert the call. To do this, press the Recall key **[R]**. The subsequent procedure depends on your PABX. By default, the Recall key is preset to a flash time (interruption time) of 90 ms for use of new features on **public** telephone systems. With a connection to a **PABX**, it may be necessary to change the flash time (e.g. 600 ms). To do this, please refer to the operating instructions for your PABX.