


# SIEMENS

## Gigaset A370



## User Manual

## Handset at a glance

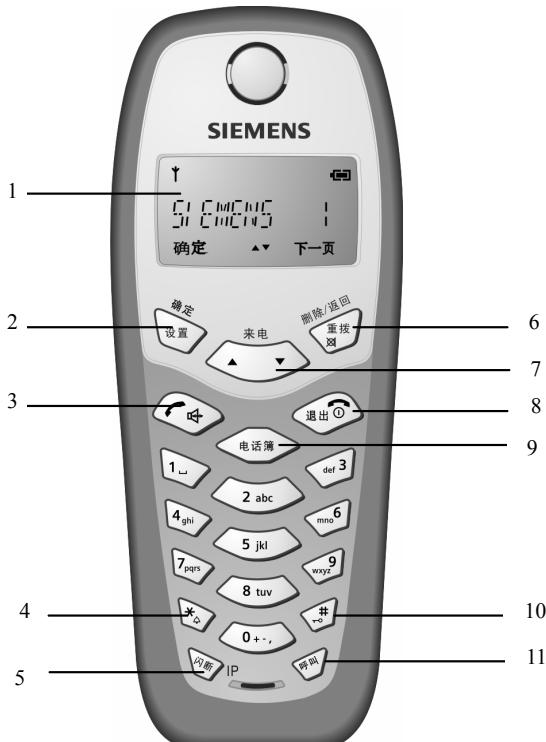

- 1, Display
- 2, Setting/Confirm
- 3, Talk/Handsfree
- 4, \* Key  
(Ringer off by long press)
- 5, Flash/IP
- 6, Redial/¶/Back/Delete
- 7, Incoming call/Search Key
- 8, End Key  
(On/Off by long press)
- 9, Phonebook
- 10, # Key  
(Lock keypad by long press)
- 11, Intercom key

### Meaning of the Icon and words displayed on screen:

	Strength of the wireless signal
	Situation of the battery
<b>通话</b>	Talking mode
<b>电话簿</b>	Phonebook
<b>闹铃</b>	Alarm clock ON
<b>静音</b>	Ringer tone OFF (long press * key)
<b>确定</b>	Function confirm
<b>下一页</b>	Display next page (e.g. in phonebook)
<b>KEYS LOCKED</b>	Keypad locked (long press # key)

# Catalog

<b>Handset at a glance.....</b>	<b>1</b>
<b>Safty precaution.....</b>	<b>3</b>
Preparing to use the phone.....	4
Installing the base.....	4
Inserting the battery and charging .....	4
Automatically registering.....	5
Manually registering handsets.....	6
Deregistering handsets.....	6
Changing handset name.....	6
Paging handsets.....	6
Setting date and time.....	7
<b>Using the handsets.....</b>	<b>8</b>
Activating/Deactivating keypad lock .....	8
Deactivating/activating ringer tone.....	8
Back to the idle.....	8
Operating the menu.....	8
Correcting wrong input.....	8
<b>Making calls.....</b>	<b>9</b>
Making an external call.....	9
Mute.....	9
Ending a call.....	9
Accepting a call.....	9
Activating/deactivating Auto answer.....	9
Caller ID.....	10
<b>Using directory and lists.....</b>	<b>10</b>
Phonebook.....	10
Last number redial list.....	11
Calls list.....	11
IP dialing.....	12
<b>Using several handsets.....</b>	<b>13</b>
Intercom.....	13
Conference call.....	14
<b>Handset setting.....</b>	<b>15</b>
Alarm clock setting.....	15
Adjusting the talk volume.....	15
Ringer tone setting.....	15
Activating/Deactivating the keypad beep.....	16
<b>Base station setting.....</b>	<b>16</b>
Prefix PABX number.....	16
Restoring the base default setting.....	16
Use flashing to transfer call to other ext.....	16
<b>Appendix.....</b>	<b>17</b>
Care.....	17
Contact with liquid.....	17
General specifications.....	17
Standard character.....	17
Questions and answers.....	17
<b>Menu tree.....</b>	<b>18</b>

# Safety precaution

## Caution:

Read the safety precaution and the instruction before use.

Explain the contents to your children and the potential hazards associated with using the telephone.



Only use the main adapter supplied.



Fit only the recommended rechargeable batteries of the same type! Do not use any other battery type or non-rechargeable batteries as this could result in significant health risks and personal injury.



Insert rechargeable batteries as indicated by their polarity symbols, and use them according to these instructions (polarity symbols can be seen in the handset's battery compartments).



The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. operation rooms.



The handset may cause an unpleasant humming noise in hearing aids.



Do not install the base station in bathrooms or showers. The handset and base are not waterproof.



Switch off your phone when onboard aircraft. Ensure that it cannot be switched on and again accidentally.



Do not use your phone in environments with a potential explosion hazard, e.g. auto paint shops.



If you give your Gigaset to someone else, make sure you also give them the operating manual.



Dispose of the batteries and phone in accordance with environmental regulations.

# Preparing to use the phone

## Installing the base

Connect the Base to power cord (220V) and phone cord, place the cords in the cord recesses.



Bottom view of Base

### Notice:

Using the phone in a dry and indoor environment.

Try to place the phone on the center of your house.

Keep the phone away from hot things or other electric appliances, and no sunshine allowed.

Try to keep the phone away from other wireless equipment.

Keep the phone away from dust and corrosive liquid and air.

### Remind with friendliness:


Keep the power adapter connect with Base all the time, or the phone can't dialing out.

## Inserting the battery and charging

### Notice:


It's recommended to use the batteries supplied by SIEMENS, i.e. never use the conventional (non-rechargeable) battery or other type of battery, or it could cause significant damage to health or property. For example: the outer casing of the battery could be destroyed or the battery could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

Install the batteries as the polarity indicated in the case.

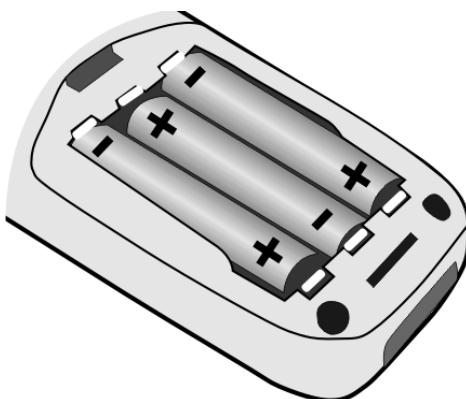

## Closing the battery cover

Put the cover on the phone as indicated on the picture below, push the cover upward until click sound is heard, means the cover is fixed properly.

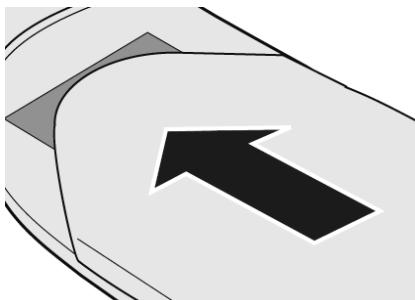

## Open the cover

Push downward to open the cover.

## First time battery charging

Put the handset on the base for charging. Please continue charging for 12-15 hours when first time using.

The battery icon  will flash on the top right of the display.

## Remind with friendliness:

- After the first time charging, the handset can be put on the base (or charger) after talking/operation.
- The battery pack heats up during charging. This is normal and not dangerous.
- After a time, the battery capacity will decrease for technical reasons.

## Quick Index

### REGISTER

#### Automatically registering

Place the handset in the charging cradle of the base station with its **display facing forward**.

Automatic registration can take up to 1 minutes. While this is happening, **WAITING** flashes on the screen. The handset is assigned the lowest unassigned internal number (1–4). The internal number is shown on the display after registration, e.g. SIEMENES 1. If the internal numbers 1 to 4 have already been assigned (four handsets have already been registered), no additional handset can be registered on this base unless one handset is deregistered.

Please use manually registering if automatically registering fail.

#### Manually registering

Press and hold the paging key on the base until the key flashing. Then,

Press "设置"(Setting) key → Press "▲ ▼" key to **ADVANCE SET 确定**

(Confirm) → **REGISTER, 确定(confirm)** → **WAITING** flashing on display.

After registered successfully, the handset goes back to idle status. The and the handset number will display on the display.

If fail to register, please repeat the operation above and try again.

#### Deregistering handsets

**Notice: Don't do this unless necessary!**

Press "设置"(Setting) key → "▲ ▼"Select **ADVANCE SET, 确定(Confirm)**

→ **Deregister, 确定(confirm)** → screen will display **HANDSET 1,**

→ "▲ ▼"Select the handset you want to deregister, **确定(confirm).**

#### Changing handset name

The handset will be assign a name automatically, e.g. "SIEMENS 1" "SIEMENS 2". You can change the name by yourself (maximum 10 letters).

Press "设置"(Setting) key → **PERSONAL SET, 确定(Confirm)** → **HANDSET**

**NAME, 确定(Confirm)** → Input name**确定(Confirm).**

#### Paging handsets

You can locate your handset using the base station.

Briefly press the "寻呼"(paging key)on the base station

All handsets will ring at the same time ("paging"), even if the ringer tone are switched off.

**End paging:** briefly press the "寻呼"(paging) key on the base station or any key on handset.

### 寻呼

### PAGING

## Quick Index

CLOCK/ALARM

重拨  
(Redial)

### Setting date and time

Press "设置"(Setting key) → CLOCK/ALARM, 确定(Confirm) → DATE/TIME

确定(Confirm) → Input date and time 确定; Input hour and minutes 确定  
(Confirm)

**Remark:**

Long press the "重拨"(Redial key) to display date/time in idle status instead of displaying handset name.

Please set the date to 29th Feb. by hand in leap year.

## Quick Index

KEYS LOCKED

TONE ON/OFF

BACK TO IDLE

设置  
(Setting)

删除  
(delete)

## Using the handsets

### Activating/Deactivating keypad lock

Screen will display **KEYS LOCKED**. Long press # key to toggle lock / unlock. It will unlock automatically when there is an incoming call. And Re-lock after talking.

### Deactivating/Activating Ringer Tone

Long press “\*\*” key to turn off the ringer tone, LCD will display **静音**  
Long press “\*\*” key to turn on the ringer tone again

### Back to the idle

You can go back to the idle status by the following ways:

Press  key back to the idle.

Or press “**返 回**”(back) key to go back to the former menu.

## Operating the menu

Your telephone's functions are accessed from a menu with a number of levels-- Main menu and sub menu.

To open the main menu, press “**设置**”key with the handset in idle status.

Scroll to the required function with the “**▲ ▼**”key and press **确定** (confirm) key to access the function.

### Correcting wrong inputs

Press the “**删除**” key to delete the wrong inputs.

## Quick Index

(make a call)

MUTE ON



AUTO ANSWER

## Making calls

### Making an external calls

Enter the phone number then press . (Active/Deactive hands free function by pressing again)

Or:

Press key and then enter number.

#### Remind with friendliness:

You can also dial out by using the number stored in phonebook or redial list.

#### Mute

Press the “” key to deactivate the microphone during the talk with external line. Screen display **MUTE ON**.

Press “” key again to talk with external line again.

#### Ending a call

Press the key to end a talk.

#### Accepting a call

Press the key to accept an incoming call.

Press key again to ON/OFF the hands free function during a talk.

If the handset is in the base and the **AUTO ANSWER** function is activated, the handset will take a call automatically when you lift it out of the base.

#### Activating/deactivating Auto answer

When this function is activated, when a call arrives you can simply lift the handset out of the base without having to press the talk key .

Press “**设置**”(setting) key → **PERSONAL SET**, **确定**(confirm)

→ Press “**▲ ▼**”key to **AUTO ANSWER**, **确定** (confirm)

→ select **ON/OFF**, **确定** (confirm).

**Quick Index****CID****PHONEBOOK****ADD NUMBER****Caller ID****Requirements: you have applied the CID service.**

When you get a call, the caller's phone number will be displayed on your handset; or the caller's name will be displayed if it is stored in the directory

**Remark:**

The phone was made according to the national standards. However sometimes the CID function can't be displayed properly for the reason of some special using condition: e.g. connecting several phone on a single line or the PABX not a standard appliance. Please contact with your local telecom service supplier.

**Using the phonebook and lists****Phonebook**

You can save up to 10 phone numbers

Press “**电话簿**” key to open the phonebook in idle. Press “**▲ ▼**” key to look for entry (Press key to see the next page of an entry)

**Length of entry**

Phonebook number: 24 digits

Name: 12 letters

<b>ADD NUMBER</b>	Add phone number
<b>LIST</b>	Phonebook list
<b>EDIT NUMBER</b>	Edit phone number
<b>DELETE NUMBER</b>	Delete entry
<b>DELETE LIST</b>	Delete phonebook list
<b>IP NUMBER</b>	IP number

**Add number**

Press “**电话簿**”(Phonebook) key → Press “**设置**” (setting) key

→ **ADD NUMBER**, **确定** (confirm) → **ENTER NAME**, **确定** (confirm)  
 → **ENTER NUMBER** **确定**(confirm)

**Quick Index**

**重拨**  
(redial)

**来电**  
(Calls list)

**Dialling with the directory**

Press “**电话簿**”(Phonebook) key → Press “**▲ ▼**”key to select the number

you want to dial → Dial by pressing  key.

**Last number redial list**

This list contains the 5 last dialled numbers (maximum 24 digits for each entry).

Press “**重拨**”(redial) key → Press “**▲ ▼**”key to select the number you want to dial → Dial by pressing  key.

Or select the following function:

<b>SAVE NUMBER</b>	Save this number
<b>EDIT NUMBER</b>	Edit this number
<b>DELETE NUMB</b>	Delete this number
<b>DELETE LIST</b>	Delete whole list

**Calls list**

Press “**来电**”(incoming call) key to enter calls list.

Press “**重拨**” key to shift from number display to time display.

Precondition:

Had applied CID, and there are some incoming calls stored in the list. 10 entries will stored in the list.

<b>SAVE NUMBER</b>	Save this number
<b>EDIT NUMBER</b>	Edit this number
<b>DELETE NUMB</b>	Delete this number
<b>DELETE LIST</b>	Delete whole list

**Remark:**

To check the date/time of this incoming call, please press “**下一页**” (Redial key)

## Quick Index

### IP NUMBER

#### IP dialling

##### Store IP number

Press IP key to store IP number at the first time you using the IP.

To change the IP number: Press “电话簿”(redial) key

→ IP NUMBER, 确定(confirm) → ENTER NUMBER, 确定 (confirm)

→ IP NUMBER, (no need to confirm)

The method that input IP NUMBER below is for your reference since it may different from various cards.

1, Input the IP access number. E.g. 17910

2, Insert “P” by long press key # if necessary (such as a voice prompt interrupt).

e.g. 17910P1P229021699398#5800#  
(means insert an pause P, select Chinese language, then insert pause again)

3, Input IP number and Password, end with #.

e.g. 17910P1P229021699398#5800#

确定 (confirm) after all the input.

##### Remind with friendliness:

The IP dialling mentioned here refers to the function of the chargeable card, not the service that supplied by telecom

#### Using the IP dialling

3 ways to dial with IP

1, Input a long distance number → press IP key

2, Select a number in phonebook/redial list → press IP key

3, press IP key → press  → input long distance number

## Quick Index

### INTERCOM

## Using several handset

### Intercom

The handsets that registered on the same base can talk each other without calling fee.

#### Calling handsets

Press “ 叫”(calling)key → Press the handset number you want to call;  
Press “\*”key to call all handsets.

The other handset answering the call by pressing  key.

#### Ending a call

Pressing  key to end the talk.

#### Accepting an external call during intercom

Both the handsets can hear a beep when an external calls in during the intercom call of two handsets.

Press  to end internal talk and start an external talk.

#### Transfer an external call to other handset

During the talk with external call, **Long press “ 叫”(calling)key** → press the handset number you want to transfer.

You can press the end call key  immediately or inform another handset before you end talk.

The call will transform back if the other handset does not take the call.

#### Internal consulting call

During the talk with external call, you can call another handset for consulting. **Long press “ 叫”(calling)key** → press the handset number you want to consult with. Intercom builds up after another handset answering that call.

Long press the “\*”key to end internal talk and back to the external talk.

## Quick Index

### CONFERENCE

#### Conference call

You are conducting an external call. An internal caller can listen in on this call and take part in the conversation.

Precondition: The “CONFERENCE” function must be activated.

##### Activate/Deactivate conference call

Press “设置”(setting) key → ADVANCE SET, 确定(confirm)

→ Press “▲ ▼”key and select CONFERENCE, 确定(confirm)

→ select ON/OFF, 确定(confirm).

##### Start a conference call:

When you want to start a conference call during an external talk:

Long press the “呼叫”key, press the handset number you want to let in. Intercom starts after the other handset takes the call. Press “呼叫” key again to start conference call.

The external call remains if one of the handset leave the conference call by pressing  key.

**Quick Index****PERSONAL SET****CLOCK/ALARM****VOLUME****MELODY****KEY BEEP****Handset setting**

Handsets have default set, you can change them to your personal set.

**Alarm clock setting**

Precondition: system time already set.

Press “**设置**”(setting) key → **CLOCK ALARM**, **确定**(confirm)

→ Press “**▲ ▼**”key to **SET ALARM**, **确定**(confirm).

There are several selections:

<b>DAILY</b>	Alarm everyday
<b>ONCE</b>	Alarm once
<b>OFF</b>	Alarm off

→ Press “**▲ ▼**”key to select, **确定**(confirm)

→ input the alarm time, **确定**(confirm)

**Adjusting the talk volume**

During the talking, press the “**▲ ▼**” key to adjust the volume. Earpiece 3 degree, handsfree 5 degree.

**Ringer tone setting****Volume**

Press “**设置**”(setting)key → **PERSONAL SET**, **确定**(confirm)

→ Press “**▲ ▼**” key to **HANDSET TONE**, **确定**(confirm)

→ **VOLUME**, **确定**(confirm)

There are several selections:

<b>HIGH</b>	High volume
<b>MEDIUM</b>	Medium volume
<b>LOW</b>	Low volume
<b>RINGER OFF</b>	Off( Long press * key in idle can also set)

**Melody:**

You can select the ringer melody you preferred.

Press “**设置**”(setting) key → **PERSONAL SET**, **确定**(confirm)

→ Press “**▲ ▼**”key to **HANDSET TONE**, **确定**(confirm)

→ **MELODY**, **确定**(confirm) → Press “**▲ ▼**”key to the ringer melody and **确定**(confirm)

## Quick Index

### Activating/Deactivating the keypad beep

Press “设置”(setting)key → PERSONAL SET, 确定(confirm)  
→ Press “▲ ▼”key to HANSET TONE, 确定(confirm)  
→ Press “▲ ▼”key to KEY BEEP, 确定(confirm)  
→ Select ON/OFF, 确定(confirm).

## PREFIX

### Base station setting

Please see the setting of flashing time and dialling mode in menu tree.

### PABX Prefix number

Normally the prefix number, such as “0”, is need to be added when you want to dial an external number if your phone is under PABX. This number can be automatically added if you set it in the Prefix.

Press “设置”(setting)key → Press “▲ ▼”key to ADVANCE SET, 确定(confirm)  
→ Press “▲ ▼” to PREFIX, 确定(confirm) → Input the number need to be added, 确定(confirm).

## DEFAULT UNIT

### Restoring the default setting

You can restore your personal set and change to default set. Phonebook, and register won't be affected.

Press “设置”(setting)key → Press “▲ ▼”key to ADVANCE SET, 确定(confirm)  
→ Press “▲ ▼” to DEFAULT UNIT, 确定(confirm) → PIN---- (input PIN code, default is 0000) → CONFIRM? 确定(confirm).

## 闪断 FLASH

### Use flashing to transfer call to other ext.

When in a call, you can transfer it to other ext. by press “闪断”(Flash), enter the ext. number you want to transfer, then end the call.

This call will auto connect to the ext. you transferred.

# Appendix

## Care

Wipe the base station and handset with a damp cloth (no solvents) or an antistatic cloth. Never use a dry cloth. This can cause static.

## Contact with liquid

If the handset has come into contact with liquid:

Switch off the handset and remove the battery pack immediately.

Allow the liquid to drain from the handset.

Pat all parts dry, then with the battery compartment open and the keypad facing down place the handset in a dry, warm place for at least 72 hours (not in a microwave, oven etc.).

Do not switch on the handset again until it is completely dry.

When it has fully dried out, you will normally be able to use it again.

## General specifications

Standard	WDCT
Range	up to 300 m outdoors, up to 50 m in buildings
Power supply	220V~/50HZ
Temperature	0–45 ° C
Handset size	142x54x25mm
Handset weight	133g
Battery	550mAh
Calling time	6 hours
Standby time	120 hours

## Standard characters

You can input some characters (e.g. during phonebook edit) by continue pressing a key:

	1 x	2 x	3 x	4 x
0	0	-	/	\
Space	Space	1	-	<

## Questions and answers

If you have any queries about the use of your phone, you can contact us any time at [www.siemens.com.cn/shc](http://www.siemens.com.cn/shc).

Or

Call hotline: 4006 706 007

## Menu tree

1	PHONEBOOK	1.1	ADD NUMBER			
		1.2	LIST			
		1.3	EDIT NUMBER			
		1.4	DEL NUMBER			
		1.5	DEL LIST			
		1.6	IP NUMBER			
2	CLOCK/ALARM	2.1	DATE/TIME			
		2.2	SET ALARM	2.2.1	OFF	
				2.2.2	DAILY	
				2.2.3	ONCE	
		2.3	ALARM TONE	2.3.1	MELODY 1	
				2.3.2	MELODY 2	
				2.3.3	MELODY 3	
3	PERSONAL SET	3.1	HANDSET TONE	3.1.1	VOLUME	3.1.1.1
						HIGH
						3.1.1.2 MEDIUM
						3.1.1.3 LOW
						3.1.1.4 RINGER OFF
				3.1.2	MELODY	3.1.2.1 Melody 1
						To
						3.1.2.10 Melody 10
				3.1.3	KEY BEEP	3.1.3.1 ON
						3.1.3.2 OFF
		3.2	HANDSET NAME			
		3.3	AUTO ANSWER	3.3.1	ON	
				3.3.2	OFF	
		3.4	CONTRAST	3.4.1	HIGH	
				3.4.2	MEDIUM	
				3.4.3	LOW	

4	ADVANCE SET	4.1	FLASH TIME	4.1.1	100 ms
				4.1.2	300 ms
				4.1.3	600 ms
		4.2	TONE/PULSE	4.2.1	TONE
				4.2.2	PULSE
		4.3	AREA CODE	(No need to set in China)	
		4.4	PABX PREFIX		
		4.5	REGISTER		
		4.6	Deregister		
		4.7	DEFAULT UNIT		
		4.8	CONFERENCE	4.6.1	ON
				4.6.2	OFF

Issued by  
Siemens Home and Office communication Devices (Shanghai) Ltd.  
All right reserved.2007